


# Air Conditioning Settings

**Cold Settings – Please allow up to 5 mins for change to take effect**

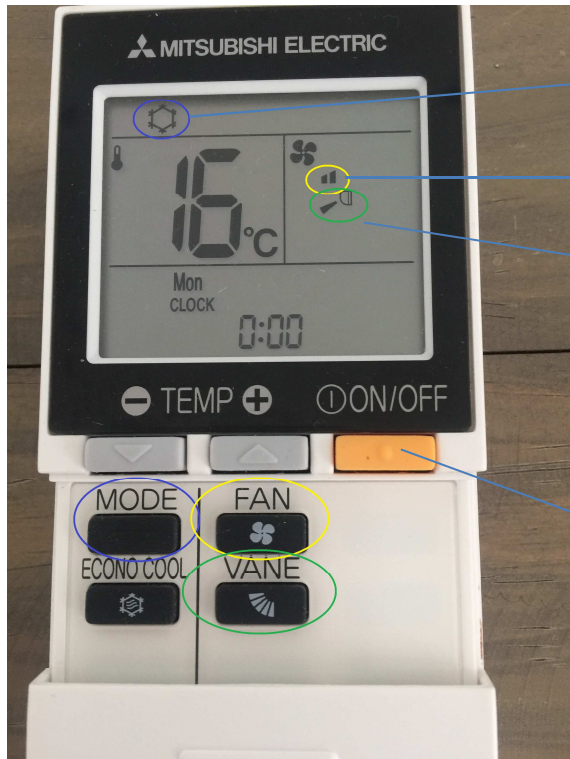


Must be on this setting for cold

This is the fan speed

This is the direction of the air flow.  
Open wide to provide max output

Please switch off on leaving the property

**Heating Settings – Please allow up to 5 mins for change to take effect**

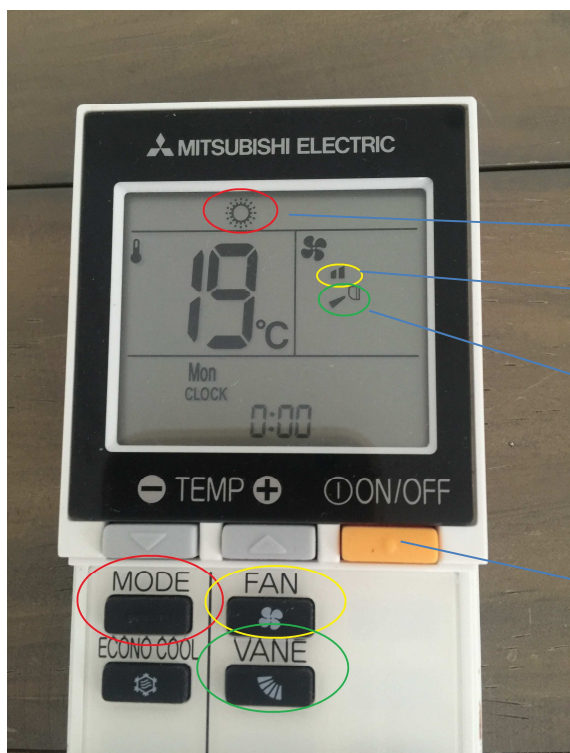

Must be on this setting to provide heat

Fan speed of the heat output

This is the direction of the air flow,  
open wide to provide max output

Please switch off on leaving the property

