



PROGRAM SELECTION BUTTON
Push "Programs" button (repeatedly) until the indicator of the required program lights up (see "Table of programs" below).

START/RESUME BUTTON
Push this button to start the selected program: the indicator lights up and goes off at the end of the program. When the door is opened during a washing cycle, the cycle is temporarily paused: the Start indicator blinks. To resume the cycle push the Start button and close the door within 3 seconds.

CANCEL/OFF BUTTON
Push this button to switch off the control panel. If pressed when a program is running it cancels the program ongoing draining water for 1 minute. If pressed when the dishwasher is switched off it drains any possible liquids from dishwasher (1 minute process). If the indicator flashes repeatedly, see page 6 - chapter "What to do if...".

BEFORE USING THE APPLIANCE FOR THE FIRST TIME CAREFULLY READ THIS QUICK REFERENCE GUIDE AND THE ASSEMBLY INSTRUCTIONS!

THE CONTROL PANEL OF THIS DISHWASHER ACTIVATES PUSHING ANY BUTTON EXCEPT CANCEL/OFF BUTTON.
FOR ENERGY SAVING THE CONTROL PANEL DEACTIVATES AUTOMATICALLY AFTER 30 SECONDS IF NO CYCLE HAS STARTED.

Table of programs

P	Programs	Loading instructions	Detergent	Consumption			Drying Phase
				Litres	kWh	Minutes ¹⁾	
1	Pre-Wash	Crockery to be washed later:	—	5.0	0.02	10	NO
2	Rapid	Lightly soiled crockery, with no dried-on food.	X	13.0	0.70	30	NO
3	ECO Eco ²⁾	Normally soiled crockery. Standard program, the most efficient in terms of its combined energy and water consumption.	X	15.0	1.02	165	Full
4	Intensive	Recommended program for heavily soiled crockery, especially suitable for pans and saucepans.	X	15.0	1.50	140	Full

1) Program data obtained in conformity with European standard EN 50242, obtained under normal conditions (without any options) and may vary depending on conditions. Differences of up to 20 minutes are possible with sensor programs as a result of the appliance's automatic calibration system.

2) Reference program for energy label in compliance with EN 50242 regulations. - Note for Testing Institutes: for detailed information on the EN/Standard loading comparison test and other tests, contact using following address: "contact@whirlpool.com".

*Power consumption in: Left-on mode: 0.70 W / Off mode: 0.40 W.